


PF Bldg / Roof / Retro / Bottom of Purlins

InfraStop® Installation Instructions

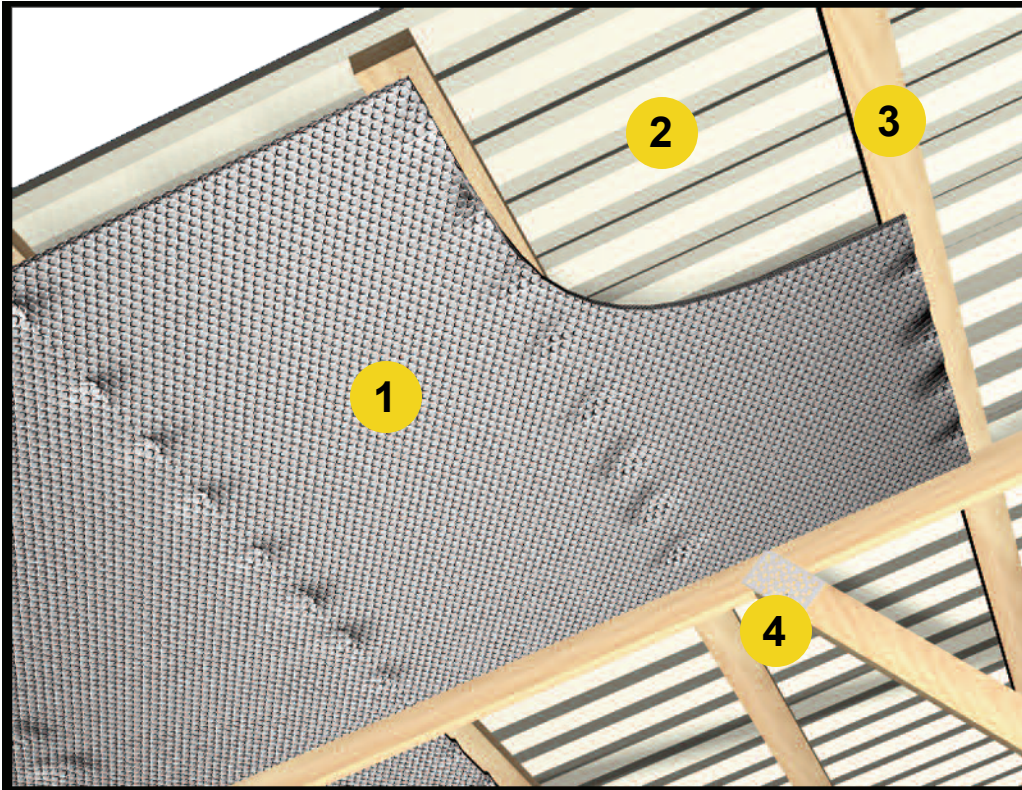

1. InfraStop® Insulation
2. Exterior Roof Panel
3. Purlin
4. Truss

Tools Required:

- Safety Glasses
- Tape Measure
- Utility Knife
- Staple Gun

Recommended Products:

Reflective/Bubble/Bubble/Reflective - Roll: ISFDF48100 (48"x 100')

Bottom of the Purlins

Metal Interior

R-11 Heat Flow Down (and a Radiant Barrier) | R-5.1 Heat Flow Up

Open Interior

R-9.0* Heat Flow Down (and a Radiant Barrier) | R-4.4* Heat Flow Up

Please Note: In addition to the stated R-value, this application also provides a Radiant Barrier.

As a result, a 96% reduction of the radiant energy that ordinarily would be transmitted to the interior of the building is blocked.

Installation Instructions:

- Inspect the roof area for clutter in buildings where there is no ceiling.
- Measure the distance between the trusses. Many times, the distance will be 4' or less. In some geographical areas, due to snow load, the distance will be as close as 2'.
- Cut pieces of the InfraStop® Reflective/Bubble/Bubble/Reflective product, 6" longer than the distance between the ridge pole and the bird's mouth. >

- Staple the product to the bottom of the purlins with 5/16” staples, 3” to 4” apart. Turn the edges down and staple to the side of the top cord of the trusses.
- Staple the top of the insulation to the ridge pole and the bottom to the top plate at the wall.
- Tape any butt seams with InfraStop® Foil Tape. Make sure the tape is applied so that a proper bond occurs.

* Includes thermal resistance of 1.32 UP and 4.55 DOWN for interior air film.

Calculation Disclaimer: All values are calculated based on the “ASHRAE Handbook of Fundamentals” heat flow up and down.

Review These Important Safety Guidelines Prior to Installation:

- **ALWAYS** check local building codes before installing InfraStop®.
- **ALWAYS** check the area you are insulating and make any needed repairs. Any worn wiring should be replaced before you begin installing InfraStop®.
- **ALWAYS** make sure work areas are well ventilated and well lighted.
- **ALWAYS** use eye protection when operating a staple gun.
- **ALWAYS** use caution and common sense when using a staple gun. Be aware of where electrical wiring is located. Stapling into a wire can cause severe shock or death. **NEVER** staple into electrical wiring.
- **ALWAYS** be careful when working with large pieces of InfraStop® on windy days.
- When installing InfraStop® on bright sunny days, it is best to wear sun glasses.
- Do not work in areas such as attics when temperatures are too hot.
- Visit our website at www.insulationstop.com for additional product and installation information.

Please Note:

The intention of these Installation Instructions and 3-D renderings are for the sole purpose of illustrating the correct location and relative position of the InfraStop® products in specific building assemblies. The correct construction methods and techniques are the responsibility of the installer or contractor. The methods outlined are recommendations on location of the InfraStop® products as a guideline. There are no claims on the part of InfraStop® that these building assemblies are finite standards or meet building code requirements (as they can vary by region).

InfraStop®

www.insulationstop.com

Phone: 800-871-0410

Fax: 888-838-5376

Email: customer.support@insulationstop.com